

Gerät/Unit	Aufbau/ Asembly Sym.od. asym. bal. or unbal.	Eingänge/Input		Ausgänge/ Output		Lautsprecher/ Speaker Kopfhörer/ Headphone
		Cinch:	XLR / Mini712	Cinch:	XLR:	
785	Asym./unbal.	ja/yes	nein/no	ja/yes	nein/no	
808 MK1/2	Asym/unbal.	ja/yes	nein/no	ja/yes	XLR-3pin male: 1-gnd 2-rem 3-pos	
808 MK3	Sym./bal.	ja/yes	Mini 712: 1-neg 2-gnd 3-pos	ja/yes	Output 1 : XLR-3pin male 1-gnd 2-rem 3-pos (XLR-4pin see below) Output 2: XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	
808 MK3 XLR	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
808 MK5	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
828	Asym./unbal.	ja/yes	XLR-3pin male: 1-gnd 2-rem 3-pos	nein/no	nein/no	Polklemmen Speakerterminals
	Sym./bal.	ja /schaltbar yes/switchable	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	nein/no	nein/no	Polklemmen Speakerterminals
838 MC/MM	Asym./unbal.	ja/yes	Nein/no	ja/yes	XLR-3pin male: 1-gnd 2-rem 3-pos	
838 Sym MC	Sym./bal.	ja/yes	Mini 712: 1-neg 2-gnd 3-pos	Ja/yes	XLR-3pin male: 1-gnd 2-rem 3-pos	
846	Asym./unbal.	ja/yes	Nein/no	ja/yes	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	
	Sym./bal.	ja/yes	Mini 712: 1-neg 2-gnd 3-pos	ja/yes	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	
850	Sym./bal.	ja /schaltbar yes/switchable	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	nein/no	Keine/none	Polklemmen Speakerterminals
866	Sym./bal.	nein/no	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	nein/no	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	
870 /871 MK 1/2	Sym./bal.	ja/yes	Mini 712: 1-neg 2-gnd 3-pos	ja/yes	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	
877 MK 1/2	Sym./bal.	ja/yes	Mini 712: 1-neg 2-gnd 3-pos	ja/yes	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	Kopfhörer-Buchse Headphones
877 MK2 XLR	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Kopfhörer-Buchse Headphones
878	Sym./bal.	ja /schaltbar yes/switchable	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	nein/no	Nein/no	Polklemmen Speakerterminals
897	Sym./bal.	ja/yes	Mini 712: 1-neg 2-gnd 3-pos	ja/yes	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	

909-System	sym./bal	nein/no	Analogmodul : XLR-3pin male 1-gnd 2-neg 3-pos Power amp : XLR-4pin male 1-gnd 2-pos 3-neg 4-rem	ja/yes (Tape out)	Analogmodul (Tape Out) XLR-3pin male 1-gnd 2-neg 3-pos XLR-3pin male 1-gnd 2-neg 3-pos	Polklemmen Speakerterminals
909-Amp seit/since '97	sym./bal.	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	nein/no	Polklemmen Speakerterminals
911 MK1/2 bis/until ca. '96	sym./bal.	nein/no	XLR-4pin male: 1-gnd 2-pos 3-neg 4-rem	nein/no	nein/no	Polklemmen Speakerterminals
911 MK2 seit/since ca. '96	sym./bal.	Nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	Nein/no	Nein/no	Polklemmen Speakerterminals
915	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
916 +DA1/2	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
917 +DA1/2	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
Concerto Preamp	Sym./bal. (optional)	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	
Concerto Poweramp	Sym./bal.	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	Nein/no	Polklemmen, Kopfhörerbuchse Speakerterminals, Headphones
Concerto CD	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	
Concerto Tuner	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	
920	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
931	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
933 MK 1/2	Sym./bal.	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	Nein/no	Polklemmen Speakerterminals
935 MK 1/2	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
937	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
939	Sym./bal.	nein/No	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
940	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	nein/no	Polklemmen, Kopfhörerbuchse Speakerterminals Headphones
941	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
949-aktiv/active crossover	Sym./bal.	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	XLR-3pin male 1-gnd 2-neg 3-pos	
956 MK 1/2	Sym./bal.	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	nein/no	Polklemmen Speakerterminals
959	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Polklemmen Kopfhörerbuchse Speakerterminals Headphones
961-aktiv/active	Sym./bal.	nein/no	XLR-3pin female	nein/no	XLR-3pin male	

crossover			1-gnd 2-neg 3-pos		1-gnd 2-neg 3-pos	
969	Sym./bal.	nein/no	BNC-External clock input	ja-nur Digital! yes, digital only!	XLR-3pin male DIGITAL! 1-gnd 2-neg 3-pos	
978	Sym./bal.	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
979	Sym./bal.	nein/no	BNC-External clock input	ja-nur Digital! yes, digital only!	XLR-3pin male DIGITAL! 1-gnd 2-neg 3-pos	
980	Sym./bal.	Ja-nur digital! yes, digital only	ja-nur digital! yes, digital only XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
991	Sym./bal.	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	Nein/no	Polklemmen, Kopfhörerbuchse Speakerterminals Headphones
992	Sym/bal	ja nur digital ! yes, digital only	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
993	Sym,bal	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
001	Sym,bal	ja nur digital ! yes , digital only	ja nur digital ! yes , digital only XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
006	Sym,bal	ja nur digital ! yes, digital only	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
007	Sym,bal	ja/yes	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
011	Sym,bal	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
032	Sym,bal	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Polklemmen Kopfhörerbuchse Speakerterminals Headphones
033	Sym,bal	ja nur digital ! yes, digital only	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
035	Sym,bal	ja/yes	XLR-3pin female	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Kopfhörerbuchse Headphones
036	Sym,bal	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	nein/no	Polklemmen Kopfhörerbuchse Speakerterminals Headphones
037	Sym,bal	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	nein/no	Polklemmen Speakerterminals
039	Sym,bal	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	nein/no	Nein/no	Polklemmen Speakerterminals
051	Sym,bal	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Polklemmen Kopfhörerbuchse Speakerterminals Headphones
052	Sym,bal	ja nur digital ! yes , only digital	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
053	Sym,bal	nein/no	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	

057	Sym,bal	ja/yes	nein/no	nein/no	XLR-3pin male 1-gnd 2-neg 3-pos	
061	Sym,bal	ja nur digital yes only digital	nein/no	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
069	Sym,bal	ja nur digital yes only digital	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	
077	Sym,bal	nein/no	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Kopfhörerbuchse Headphones
082	Sym,bal	ja/yes	XLR-3pin female 1-gnd 2-neg 3-pos	ja/yes	XLR-3pin male 1-gnd 2-neg 3-pos	Polklemmen Kopfhörerbuchse Speakerterminals Headphones
087	Sym,bal	ja/yes	nein/no	nein/no	XLR-3pin male 1-gnd 2-neg 3-pos	